

How to Install a Replacement Cover/Pad on a Fixed Position Board

Note: Before removing your existing cover and pad, examine how it is installed since this will be helpful when installing your replacement cover and pad.

- 1 Remove Old Cover/Pad:** With board in upright position, cut strings on both sides of board. Then lower board to ironing position and remove old cover and pad.
- 2 Place New Cover/Pad:** Place the new pad on board, extending the edges slightly over the tapered end of board. Place the new cover on top of the pad and extend the edges approximately 1 1/2" over pad.
- 3 Partially Tighten:** Placing your hand on the tip of the board, pull one drawstring at a time to partially secure cover/pad over the tip of the board.
- 4 42-Inch Only:** If you have a 42" board, fold approximately 6" of the excess cover underneath the pad.

- 5 Thread Drawstrings:** With board in upright position, thread the ends of the drawstring starting from the inside of the cover. Pull through each eyelet according to board size.

42" Boards: Use middle eyelets

46" Boards: Use bottom eyelets

- 6 Finish Threading:** Thread drawstrings through the eyelets found on the outside edges of cover.
- 7 Finish Tightening & Tie Strings:** While firmly holding your hand over the end of the board, keeping the cover/pad in one place, fully tighten one drawstring at a time, pulling snug. **Caution: Pull slowly, being careful not to snap string.**

Tie tightened string into a knot, then cut excess string from each side.



220 W. Jackson, Morton, IL 61550
1-800-536-9495
www.ironaway.com



For visual instructions, visit us online at
www.ironaway.com/cover-pad-replacement

001102 06/202

How to Install a Replacement Cover/Pad on a Swivel Board

Note: Before removing your existing cover and pad, examine how it is installed since this will be helpful when installing your replacement cover and pad.

- 1 Remove Old Cover/Pad:** Lower the board and swivel it parallel to the wall. Cut strings on both sides of cover, and remove old cover/pad.
- 2 Place New Cover/Pad:** Place the new pad on board, extending the edges slightly over the tapered end of board. Place the new cover on top of the pad and extend the edges approximately 1 1/2" over new pad.
- 3 Partially Tighten:** Placing your hand on the tip of the board, pull one drawstring at a time to partially secure cover/pad over the tip of the board.
- 4 42-Inch Only:** If you have a 42" board, fold approximately 6" of the excess cover underneath the pad.

- 5 Thread Drawstrings:** Thread the ends of the drawstrings through the eyelets based on board size:

42" Boards: Use middle eyelets


46" Boards: Use bottom eyelets

- 6 Finish Threading:** Thread drawstrings through the eyelets found on the outside edges of cover.
- 7 Finish Tightening & Tie Strings:** While firmly holding your hand over the end of the board, keeping the cover/pad in one place, fully tighten one drawstring at a time, pulling snug. **Caution: Pull slowly, being careful not to snap string.**

Tie tightened string into a knot, then cut excess string from each side.



220 W. Jackson, Morton, IL 61550
1-800-536-9495
www.ironaway.com

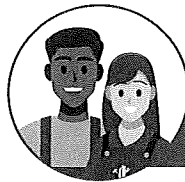

For visual instructions, visit us online at
www.ironaway.com/cover-pad-replacement