

## 1064 BI-FOLD DOOR LOCK


INSTALLATION INSTRUCTIONS



BI-FOLD For closet doors 3/4" (19mm) - 1-3/8" (35mm)

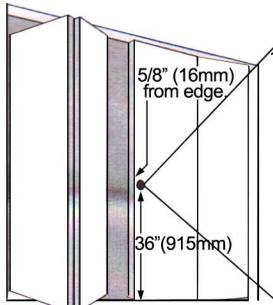

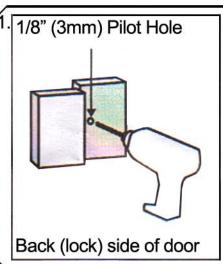

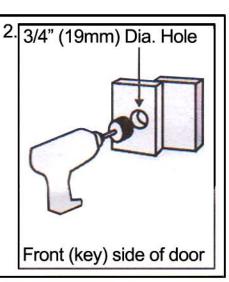


3. Front (key) side of door

Insert lock shroud from key side of door, as shown.

4. Back (lock) side of door

Insert assembly from lock side of door, as shown. Attach with included screws.

## 5. Door jamb installation

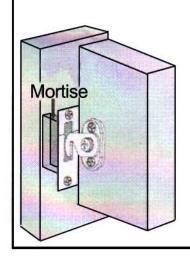

Turn lock latch to horizontal position. Level top of lock latch with stamped line on the strike plate. Mark and mortise jamb to accomodate lock latch and strike plate.

## Double door installation

Fully close doors.
Align lock strike and lock latch. Attach lock strike with screws.

