





1062 POCKET DOOR LOCK

INSTALLATION INSTRUCTIONS • ÉTAPES D'INSTALLATION • INSTRUCCIONES DE INSTALACIÓN



Pocket Door • Porte coulissante escamotable • Puerta empotrada

For closet doors 3/4" [19mm] - 1-3/4" [44.5mm]
 Pour portes de placards de 3/4 po [19 mm] à 1-3/4 po [44,5mm]
 Para puertas de closet de 3/4 pulg. [19mm] - 1- 3/4 pulg. [44.5mm]

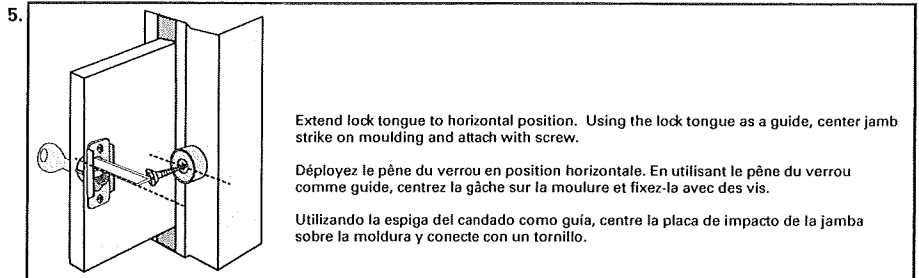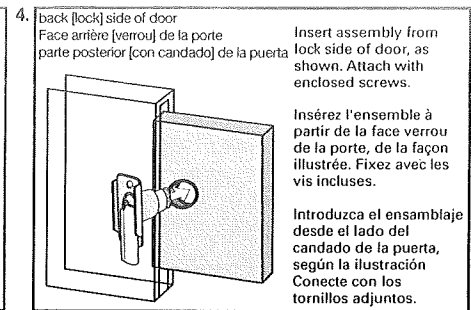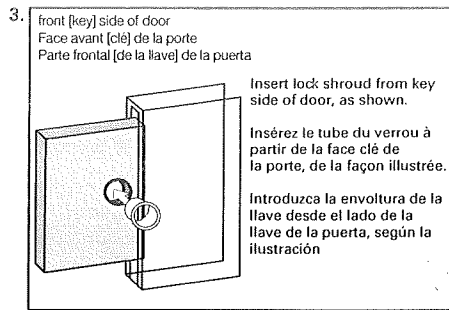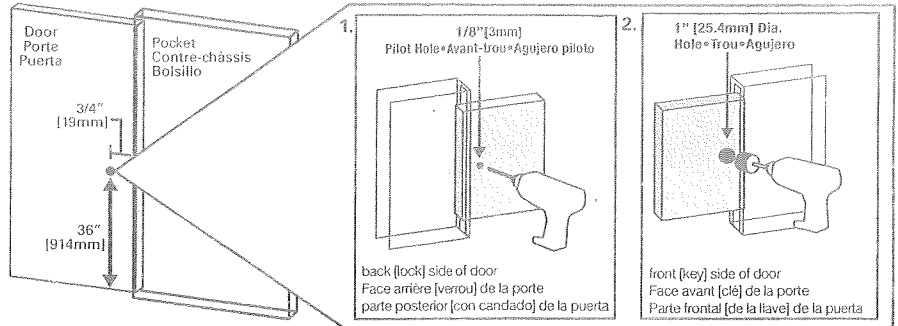

KNAP & VEGT.
 2700 Oak Industrial Dr. NE
 Grand Rapids, MI 49505 USA
 800.253.1561 www.kv.com

©2012 Knap & Vegt. All rights reserved.
 Reservados todos los derechos. Tous droits réservés.
 Made in China • Fabriqué en China • Hecho en China

6648-778_A_0412