
KV 8090 Series

4x4 Pocket Door™ Slide Cassette Roller (8090P CR)

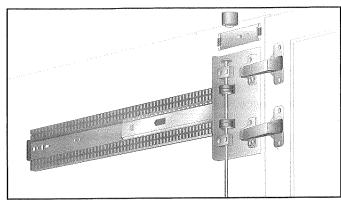



KV KNAPE & VOGT

Installation Instructions for the KV 8090 Series 4x4 Pocket Door™ Raised Panel Cassette Roller

READ INSTRUCTIONS FIRST!

These instructions show how to install the KV 8090 Cassette Roller. Please note that improper installation may void the Knape & Vogt Limited Lifetime Warranty. To install the cassette roller correctly, follow the following instructions, use only KV hardware and make no modifications. If you have questions or need additional information, please contact Knape & Vogt customer service.

- Step 1. **Determine the set back for the cassette roller**Set back will be equal to the door thickness plus 1/4".
- Step 2. **Determine the centerline of the cassette roller**Locate the centerline of the cassette roller the same as the approximate centerline of the top and bottom door frame rail.
- Step 3 Secure the cassette roller with enclosed screws

